



Micro 2 Full HD

Half-Duplex
Encoder / Decoder



Quick Start Guide

Note: This document reflects the current feature-set which may change without notice. We will attempt to keep all users up-to-date on any such changes. All context is © 2019. All rights reserved.

Document History:
May 2019. Document 1.0b. DB

©2019 Streambox, Inc. All rights reserved. The Streambox logo, ACT-L3, L5 codec, and LDMP are trademarks of Streambox, Inc. All other brands and products names are trademarks or registered trademarks of their respective holders. Information supplied by Streambox, Inc. is believed to be accurate and reliable. Streambox, Inc. assumes no responsibility for any errors in this brochure. Streambox, Inc. reserves the right, without notice, to make changes in product design or specifications.

Introduction

Micro 2 is more than just a simple upgraded Micro, it is a whole new philosophy based on customer feedback. Micro 2 is both a mobile encoder and decoder designed for professional Contribution, Production, and Collaboration. Micro 2's advanced performance encoder/decoder provides near lossless video quality, for secure, real-time, workflows. Micro 2 supports HD resolutions, along with High Dynamic Range (HDR) color standards to create streaming content for broadcasting, enterprises, and post production by providing low latency video in HD formats over public and private IP networks.

The software-defined Streambox Micro 2 Encoder / Decoder is an economical palm size device, providing minimal latency, and integrated reliable LDMP media transport technology that simplifies streaming workflows over Internet and MPLS networks. Built on Chroma technology, it provides high-quality, superb color, low-bandwidth video that can be seamlessly transported where mission critical media is required. Real-time transport assures an efficient solution for feature editors to stream into the cloud where producers and directors can perform live review sessions, commercial advertising producers can implement review and edit meetings, and broadcasters can set up video contribution between locations and network centers.

Getting Started

What's Included:

- 1 x Micro 2 unit with HD-SDI and LCD control panel
- Linux operating system running on Intel i3 processor
- HD Encoder and Decoder software
- AES 128-bit encryption (optional)
- Web user interface for secure local and remote access

What's Supported:

- HD or SD up to 4:2:2 color, Rec.709
- HD: 1920x1080p, 1920x1080PsF, 1920x1080i, 1440x1080i, 1280x1080i, 960x1080i, 1280x720p, 960x720p, 800x720p, 640x720p
- 8-channel embedded audio
- Bitrates: 64Kbps to 80Mbps
- Encoding latency: adjustable from 200msec to 2sec
- ACT-L3 codec with Low Delay Multi-path Protocol (LDMP) transport
- Optional end-to-end AES 128-bit Encryption (with no increase in latency)
- Integrated Streambox Cloud Service (AWS) for low delay streaming worldwide

What's Needed:

- Set up Encoder – Decoder per 'Initial Connections' section below
- For use with Streambox Cloud Services: Get account name (DRM) from Streambox Sales or Support (if you don't already have one).

Anatomy of the Micro 2

Micro 2 is a software defined encoder and decoder packaged as a small form factor device made available as a *Hardware as a Service (HaaS)* or *Infrastructure as a Service (IaaS)* offering. The Micro 2 device is based on an Intel NUC computer with an i3 processor using the same Linux software base as the Streambox Chroma rackmount systems.

Front Panel

LCD display with Joystick
Push-to-Enter, navigation



Figure 1 Dashboard

BUTTONS:

Dashboard: Status & Meters

Stream: Start/Stop Encoder stream

Preview: Thumbnail preview

Joystick: Enter & open Main Menu



Figure 2 Preview

Preview:

In Encoder mode, Preview shows the incoming video from SDI In. In Decoder mode, Preview shows the incoming video over the network.



Figure 3 Main Menu

Main Menu:

Provides access to all basic services, including switching between Encoder and Decoder mode.

Right Panel



PWR: On/Off
IFB: Audio out for IFB monitor
USB: USB 2 & 3
SDI In: Video source in (Encoder)
SDI Out: Video out (Decoder)

Left Panel



USB-C: mouse/keyboard/for future features
USB 3: mouse/keyboard/for future features
LAN: RJ45 connection
HMDI Cns: Counsel display for system user interface
12-19V: For power adaptor (110-120VAC, 50W max)

Initial Connections

- Connect LAN (Internet)
- Plug in power adaptor
- As Encoder: connect video source to SDI In (Right Panel)
- As Decoder: connect monitor to SDI Out (Right Panel)
- Determine assigned IP address (see next)


IP Address

It is important to confirm the IP address assigned to this machine for both remote Web access and the destination IP when used as a decoder. Push the 'Dashboard' button (top); the assigned IP address will appear on the lower part of the Dashboard screen (green arrow).




Initial Setup

First you must decide whether the unit will be used as a decoder or an encoder. It can be used as either or, but not simultaneously.




Using an Internet browser on the same network, enter the units IP address into the browser's address field (see top image).

If this is the first time this unit has been setup then a screen with an ENCODER and DECODER selector will be displayed (see image to right). Select the highlighted/blue text which indicates the current mode that is online (regardless of what mode you want to setup). Login.

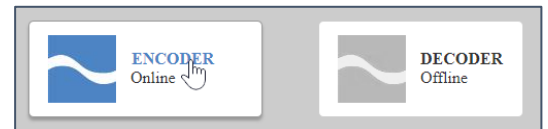

Login


The factory-set username is 'administrator' and 'demo' for the password. After you have completed the setup we recommend that you create new accounts for login.

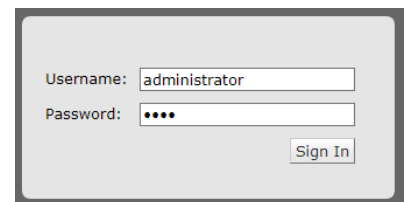

Switching Encoder/Decoder Modes

If, as in the example above, the Encoder was online and you want to setup this unit as a decoder, then go to the System tab and press the 'Switch to Decoder' button (see image below). Use the same method to switch from Decoder to Encoder mode.


NOTE: Switching between Encoder and Decoder mode can also be accomplished from the front panel Main Menu. Press the joystick button to open the main menu. Use the joystick to navigate down to the Encoder ↔ Decoder switch, press the joystick, then select the desired mode.

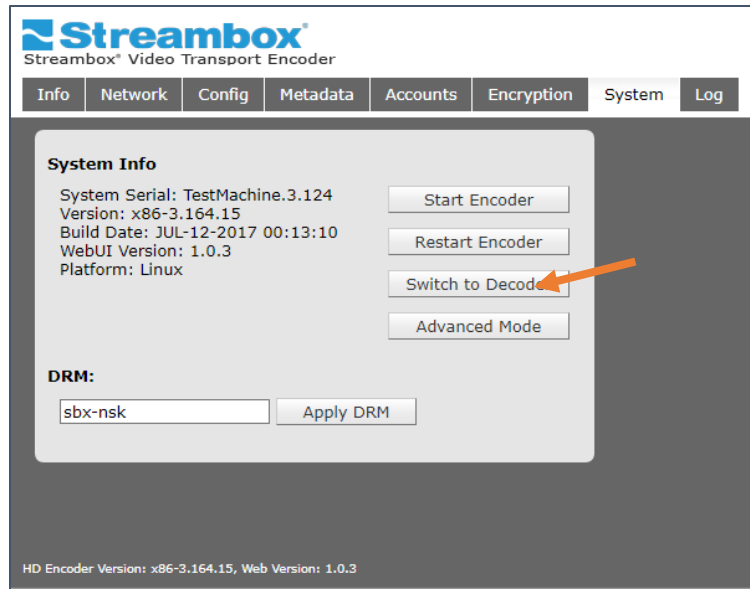

Encoder Mode

The Encoder mode has 8 tabs:

- **Info:** The Info page is essentially the status report of the video source and video stream characteristics and destination. A preview of the source video is provided with a frame rate option of OFF, High (up to 30/sec), Medium (5/sec), Low (1/sec), and Spot check (1/10sec). A START/STOP Streaming button is located here.

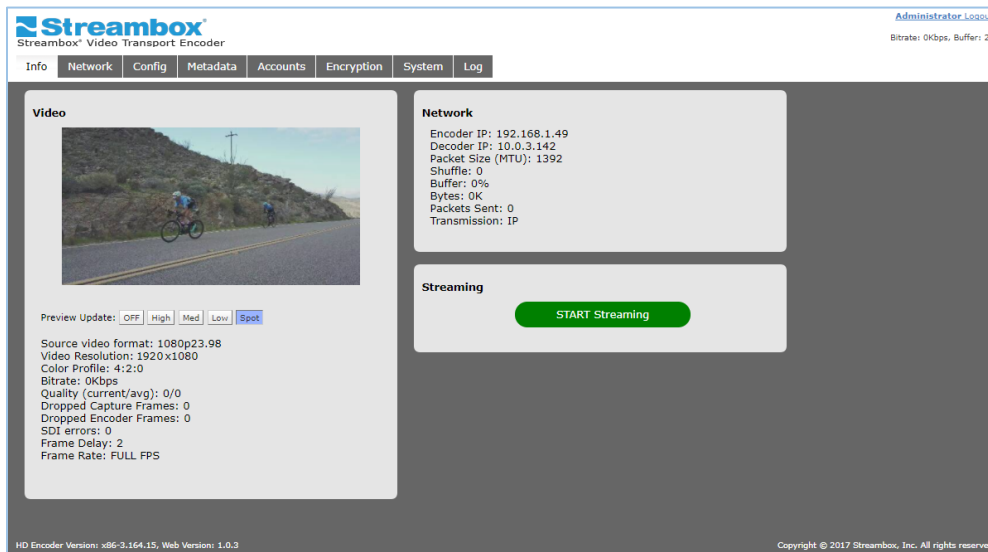

- **Network:** The Network page is where you set the Destination IP, Target Bitrate, and other values related to the video stream. Depending on the network bandwidth, Target Bitrates from 1.5 to 80Mbps have been tested. The Destination IP can be any Streambox decoder or Streambox Cloud.

Streambox Micro 2 HD Encoder – Decoder – Quick Start Guide

The screenshot shows the 'Config' page of the Streambox Video Transport Encoder. The top navigation bar includes 'Info', 'Network', 'Config', 'Metadata', 'Accounts', 'Encryption', 'System', and 'Log'. The 'Config' page is divided into several sections:

- Bitrate and Buffer Settings:** Target Bitrate: 5000 kbps, VBR Buffer: 2 seconds, Packet Stuffing: ON. An 'Apply Changes' button is present.
- Target Decoder:** Destination IP: 10.10.13.142, Destination Port: 1770 UDP (default: 1770), IP Packet Size: 1392 bytes (default: 1392). An 'Apply Changes' button is present.
- Forward Error Correction:** FEC: Off, Shuffle: Off. An 'Apply Changes' button is present.
- Manual LDMP settings:** Protocol: LDMP, CWND: 500 packets, CWND MIN: 500 packets, CWND MAX: 500 packets, ACK Timeout: 50 ms, Send timeout: 2400 ms, RTT Multiplier: 4 times, Pre-buffer for packet delay: 10 percent, Shaping Percent: 120 percent. An 'Apply Changes' button is present.

At the bottom, it shows 'HD Encoder Version: x86-3.164.15, Web Version: 1.0.3' and 'Copyright © 2017 Streambox, Inc. All rights reserved'.

- **Config:** The Config page is where you set the characteristics of the video stream. You can choose from a Present configuration, create or modify your own Preset, or manually enter the desired values.

The screenshot shows the 'Config' page of the Streambox Video Transport Encoder. The top navigation bar includes 'Info', 'Input', 'Network', 'Config', 'Metadata', 'Encryption', 'System', and 'Log'. The 'Config' page is divided into several sections:

- Video Settings:** Video Resolution: 1080p, Color Profile: 4:2:0 (default: 4:2:0), Frame-rate: Full (default: Full), Key Frames: 300 frames (default: 300 frames), Monitor CPU Usage: On (default: On), Advanced profile: On (Default: Off). An 'Apply Changes' button is present.
- Audio Settings:** Codec: AAC (default: AAC), Channels: Mono (default: 2-ch), Sample-rate: 48000 Hz (default: 48000 Hz). An 'Apply Defaults' button is present.
- Save Preset:** Preset Name*: [text field], Setting 1: Encoding, Bitrate, Latency, Setting 2: Network, FEC, Setting 3: Video/Audio Input, Setting 4: Metadata. A 'Save Current Settings' button is present.
- Presets:** A list of 6 presets with 'Load', 'Remove', and 'Modify' buttons. The presets are: 1. LAN 12M HD .75, 2. LAN 20M HD Full, 3. LAN 40M HD Full, 4. LAN 60M HD Full, 5. LAN 80M HD Full, 6. Point-to-Point 12M HD .75.

At the bottom, it shows 'HD Encoder Version: x86-3.164.10, Web Version: 1.0.3' and 'Copyright © 2017 Streambox, Inc. All rights reserved'.

- **Metadata:** The metadata page provides text fields for Title, Location, Reporter, and Producer. These text items are embedded in the stream.

Streambox Micro 2 HD Encoder – Decoder — Quick Start Guide

- **Accounts:** The Accounts page is only displayed for account administrators and is where accounts are created or modified.
- **Encryption:** The Encryption page is where you enable/disable encryption and set the Encryption Key. When enabled, the receiving decoder must use the identical key as its Decryption Key.
- **System:** The System page provides System Info, the DRM field (for account identity), the Start, Restart, Switch to Decoder, and Advanced Mode (for support) buttons.
- **Log:** The Log page provides a method to log all encoder activity for diagnostic purposes.

Decoder Mode

The Decoder mode has 6 tabs:

- **Info:** The Info page is essentially the status report of the incoming video stream plus any embedded metadata: Title, Location, Reporter, Producer, and GPS Location. Basic decoder information is also displayed.

Streambox
Streambox® Video Transport Decoder

[Administrator Logout](#)
Keep session alive: [off](#)
Bitrate: 19.0M, L=1, R=0, IP: 10.0.3.134

Info | Network | Output | Encryption | System | Log

Statistics

Bitrate: 19.0M
Buffer: 2500 KB
Lost Frames: 1
Recovered Packets: 0
Runtime: 102:26

Metadata

Title: HD Demo
Location: N/A
Connectivity: N/A
Reporter: N/A
Producer: N/A
GPS Location: N/A, N/A

Decoder Info

Video: 1920x1080
Decoder IP: 10.0.3.134
Frame Rate: 23.98 fps
Color Profile: 4:2:0
FEC: OFF
Shuffle: OFF
Latency: 1
Audio: AAC 8CH
Jitter: 776
Jitter2: 2831
Port: 1770
Field Order: UP

Interface Info

Status	Name	IP	Provider	Bitrate Kbps	Loss %	Jitter ms	Out-of-Order Packets	Delay ms	Jitter 1	Jitter 2	Max Delay ms
ON		10.0.3.124		19363	0.00	N/A	N/A	N/A	776	2831	N/A

HD Decoder Version 3.162.04, Web Version: 0.92 Copyright © 2017 Streambox, Inc. All rights reserved

- **Network:** The Network page is where standard network settings are managed. Most importantly, this is where you set the incoming port number should you need to change the default UDP port, 1770.
- **Output:** The Output page is where general output settings like number of audio channels, show audio meters and timer on the display, and output format are found. It is also where the Genlock settings are located.
- **Encryption:** The Encryption page is where you set the Decryption Key. The receiving decoder must use the identical encryption key used by the encoder.
- **System:** The System page provides System Info, the DRM field (for account identity when using Streambox Cloud), the Start, Restart, Switch to Decoder, and Advanced Mode (for support) buttons.
- **Log:** The Log page provides a method to log all encoder activity for diagnostic purposes.

Note: If switching from Encoder Mode to Decoder Mode results in a poorly rendered image/sound, simply power-cycle the machine.

HTTPS

The default configuration for internet connection to the Streambox HD units is HTTP. If your corporate protocol demands HTTPS connection, you will have to obtain the requisite certificate and then contact Streambox Support for installation instructions.

Contact Information

+1 206.956.0544 Tel

+1 206.956.0570 Fax

Sales and Information

sales@streambox.com

+1 206.956.0544, Option 1

Technical Support

support@streambox.com

+1 206.956.0544, Option 2

Corporate Headquarters

1801 130th Ave NE, #200

Bellevue, WA 98005